

INSTALLATION INSTRUCTIONS

COMMERCIAL ECONOMY CEILING MOUNT



GLAZE
HARDWARE

Phone: (813) 922-2309
glazehardware.com

Please keep this manual and the product code number for future reference and to order replacement parts if necessary

GENERAL INSTRUCTIONS

- Please read this manual carefully and thoroughly before proceeding.
- For your safety, it is recommended that you wear safety glasses at all times during installation.

INSTALLATION OVER CERAMIC TILES

- If you are installing the shower door over ceramic tiles, make sure that the tiles lay completely under the wall jamb.
- Use mildew resistant silicone to seal the gaps where the ceramic tiles meet the fixed panel.

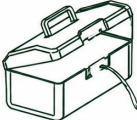
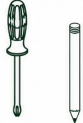
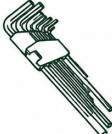
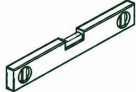
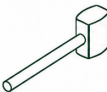
NOTICE

- Caulking is not required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR


- Do not use scouring powder pads or sharp instruments on metal pieces or glass panels.
- To keep the panels and metal parts looking new, occasionally wipe them down with a mild soap diluted in water.
- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED

 TOOL BOX	 SCREW DRIVER / PENCIL	 TAPE MEASURE / TAPE / PLUMB BOB	 ALLEN KEY SET	 LEVEL
 DRILL BITS $\phi 10$ / $\phi 8$ / $\phi 6$	 MALLET	 GLASS LIFTER	 SETTING BLOCK	 CORDLESS DRILL











Product specifications are subject to change without notice.

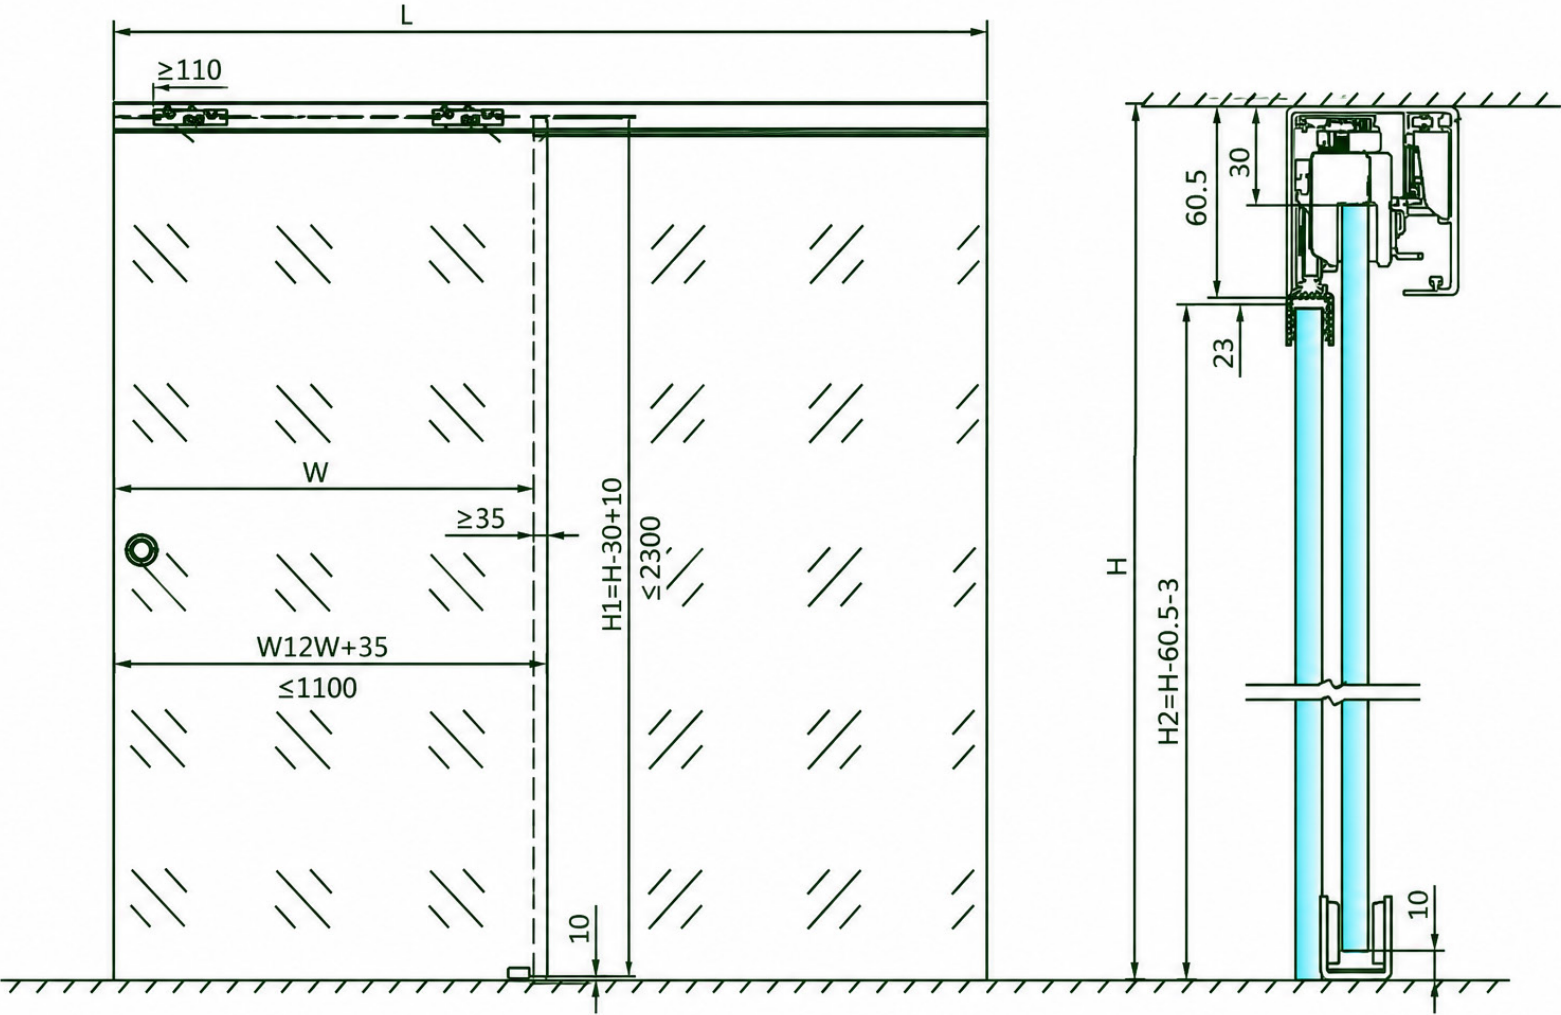CEILING MOUNT INSTALLATION



*Our products are available in a variety of colors and sizes to suit your needs.

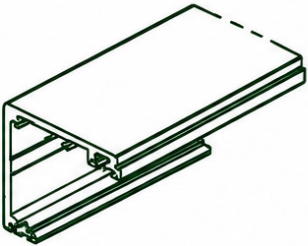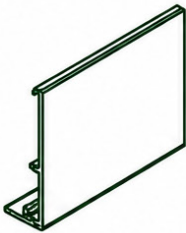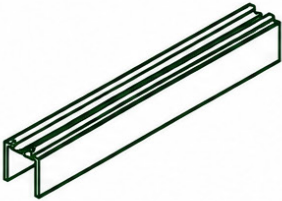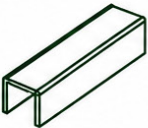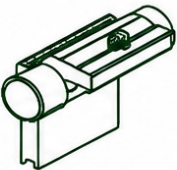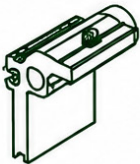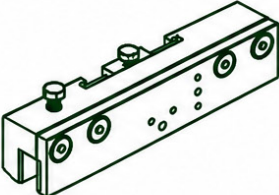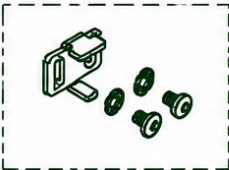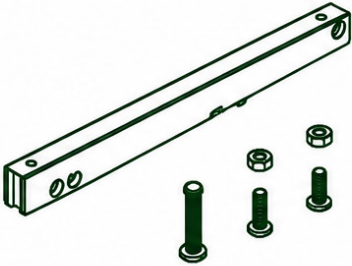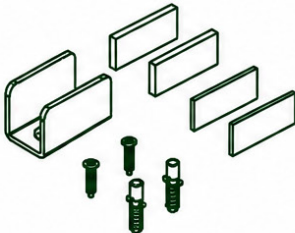
PARTS LIST

 X1	 X1	 X1
 X3	 3 Pcs Per 1 m	 X1
 X1	 X2	 X2
 X2	 X1	 X1

STEP 1

1. DRILL THE HOLES FOR THE U TYPE PROFILE:

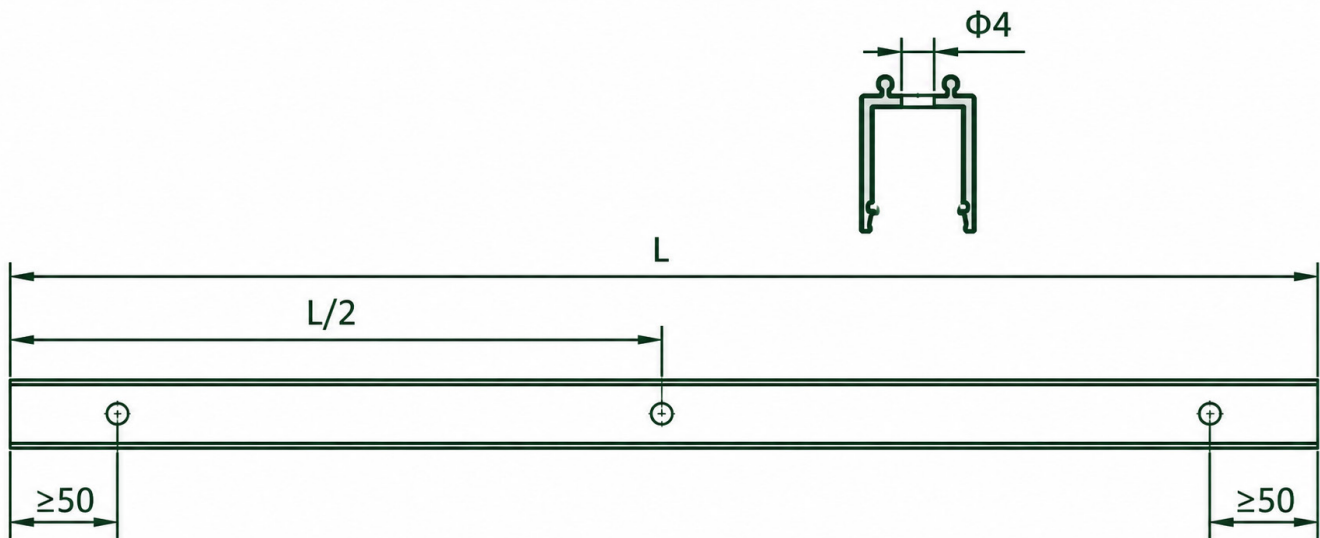1.1 Drill the 4mm holes for the U type profile, Quantity



STEP 2

2. TRACK INSTALLATION:

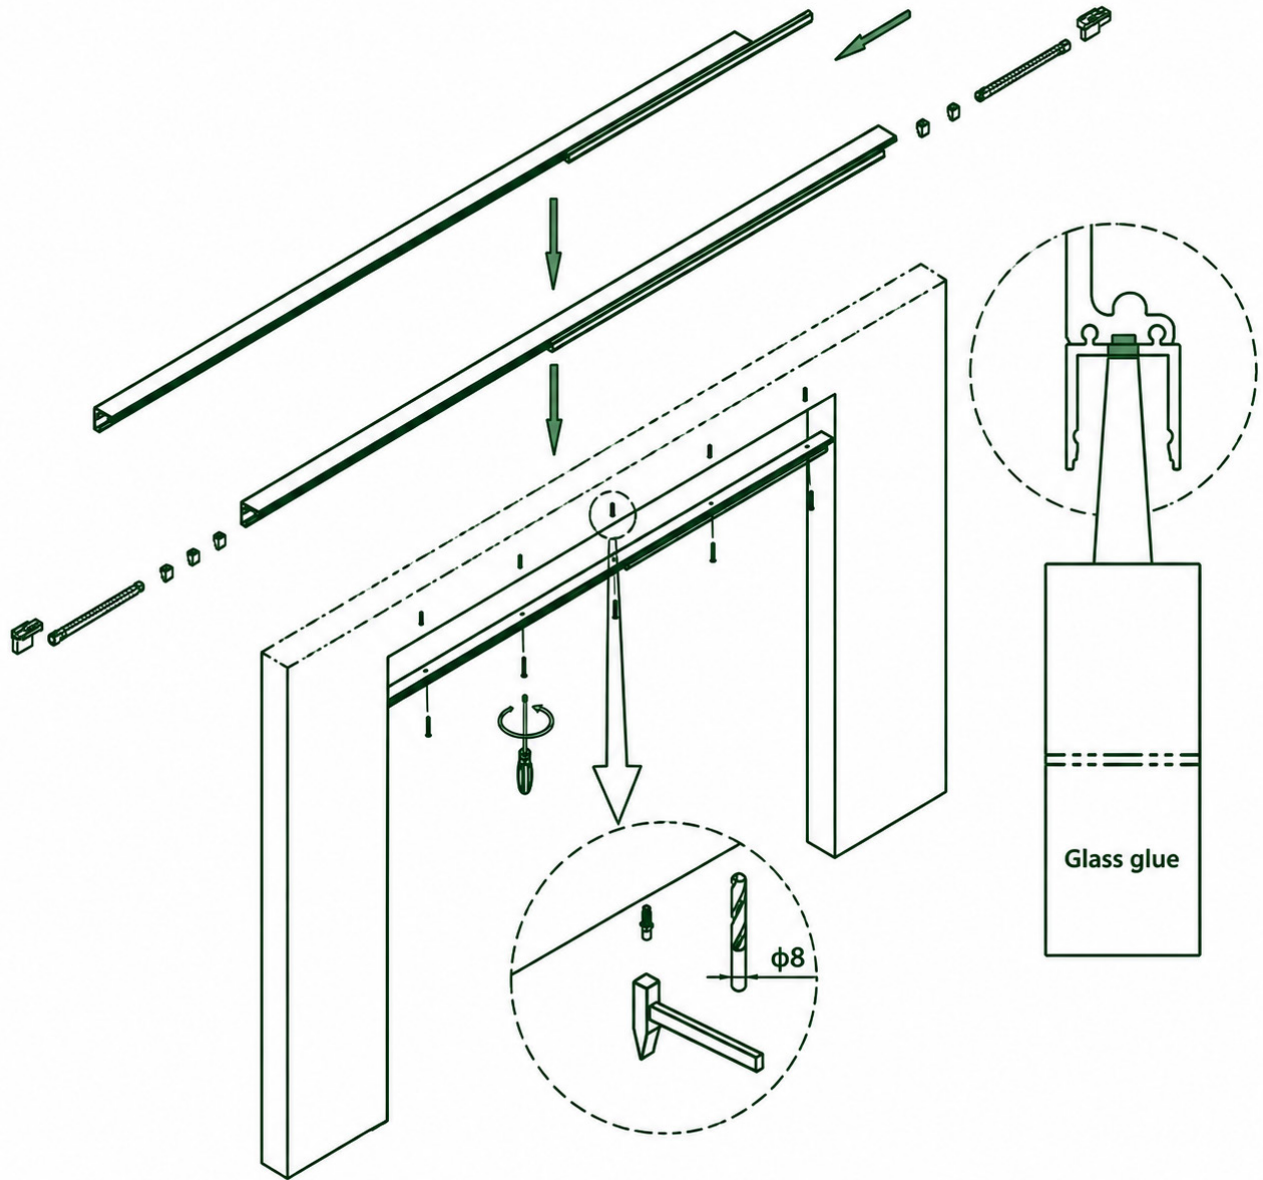
2.1 Drill the holes (dia 8x45mm) on the ceiling and insert the plastic plug.

2.2 Install the U Type Profile in the Track.

2.3 Pre-install the soft close damper, door stop and buckle and other related accessories in the track.

2.4 Install the track in the setting position

2.5 After adjusting the U type profile to the suitable position, fill a little glass glue in each ceiling mounted holes. (As shown in below).




STEP 3

3. DOOR GUIDE INSTALLATION:

3.1 Find the baseline X-X by the plumb bob, and make 24mm away from X-X as the installation standard of the door guide. (As shown in below)

3.2 Drill the dia 6mm holes in depth 20mm.

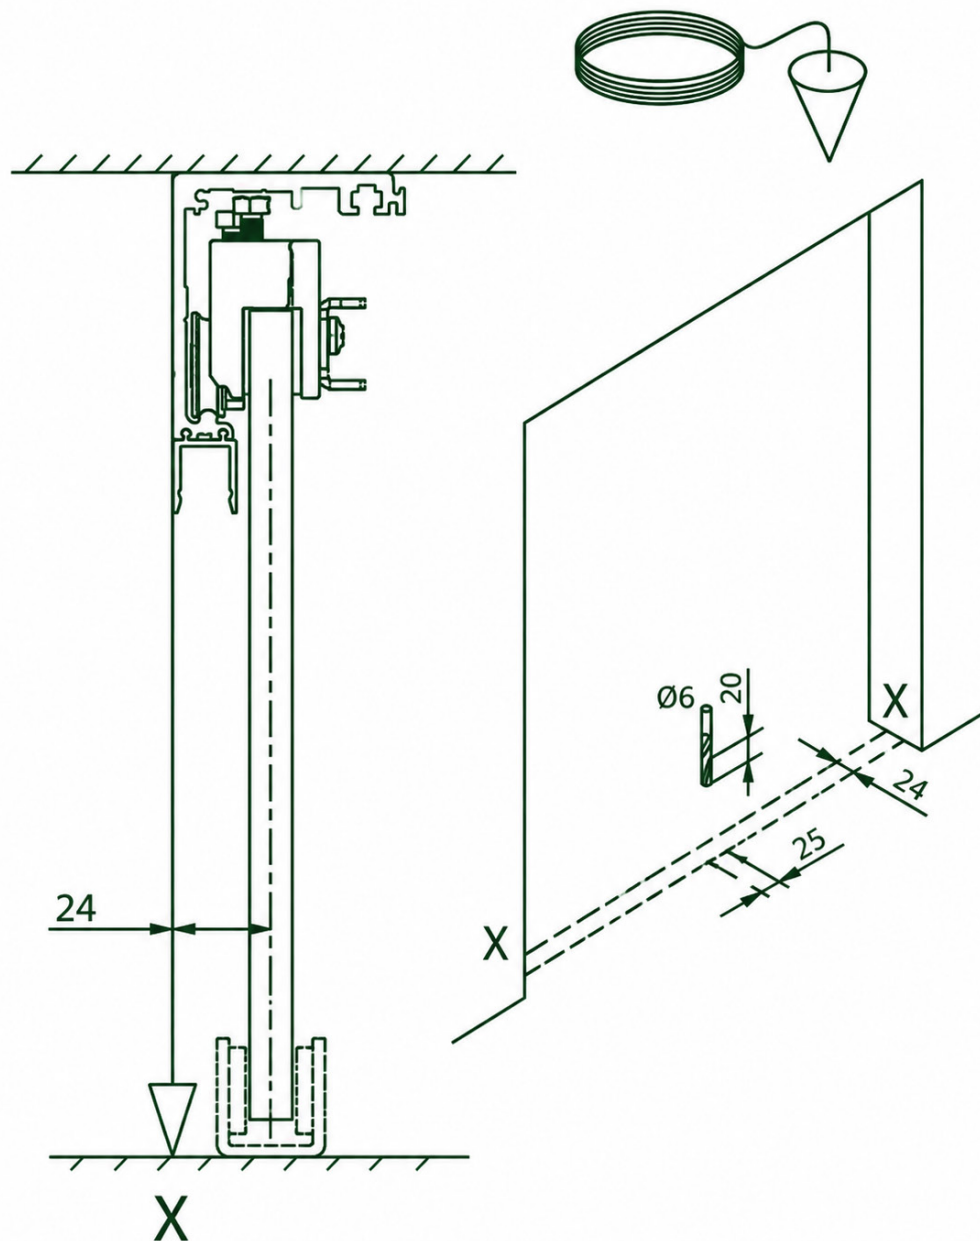3.3 Insert the plastic plug and install the door guide.




STEP 4

4. FIXED PANEL GLASS INSTALLATION:

4.1 Mount the U type plastic clips on the fixed panel glass.

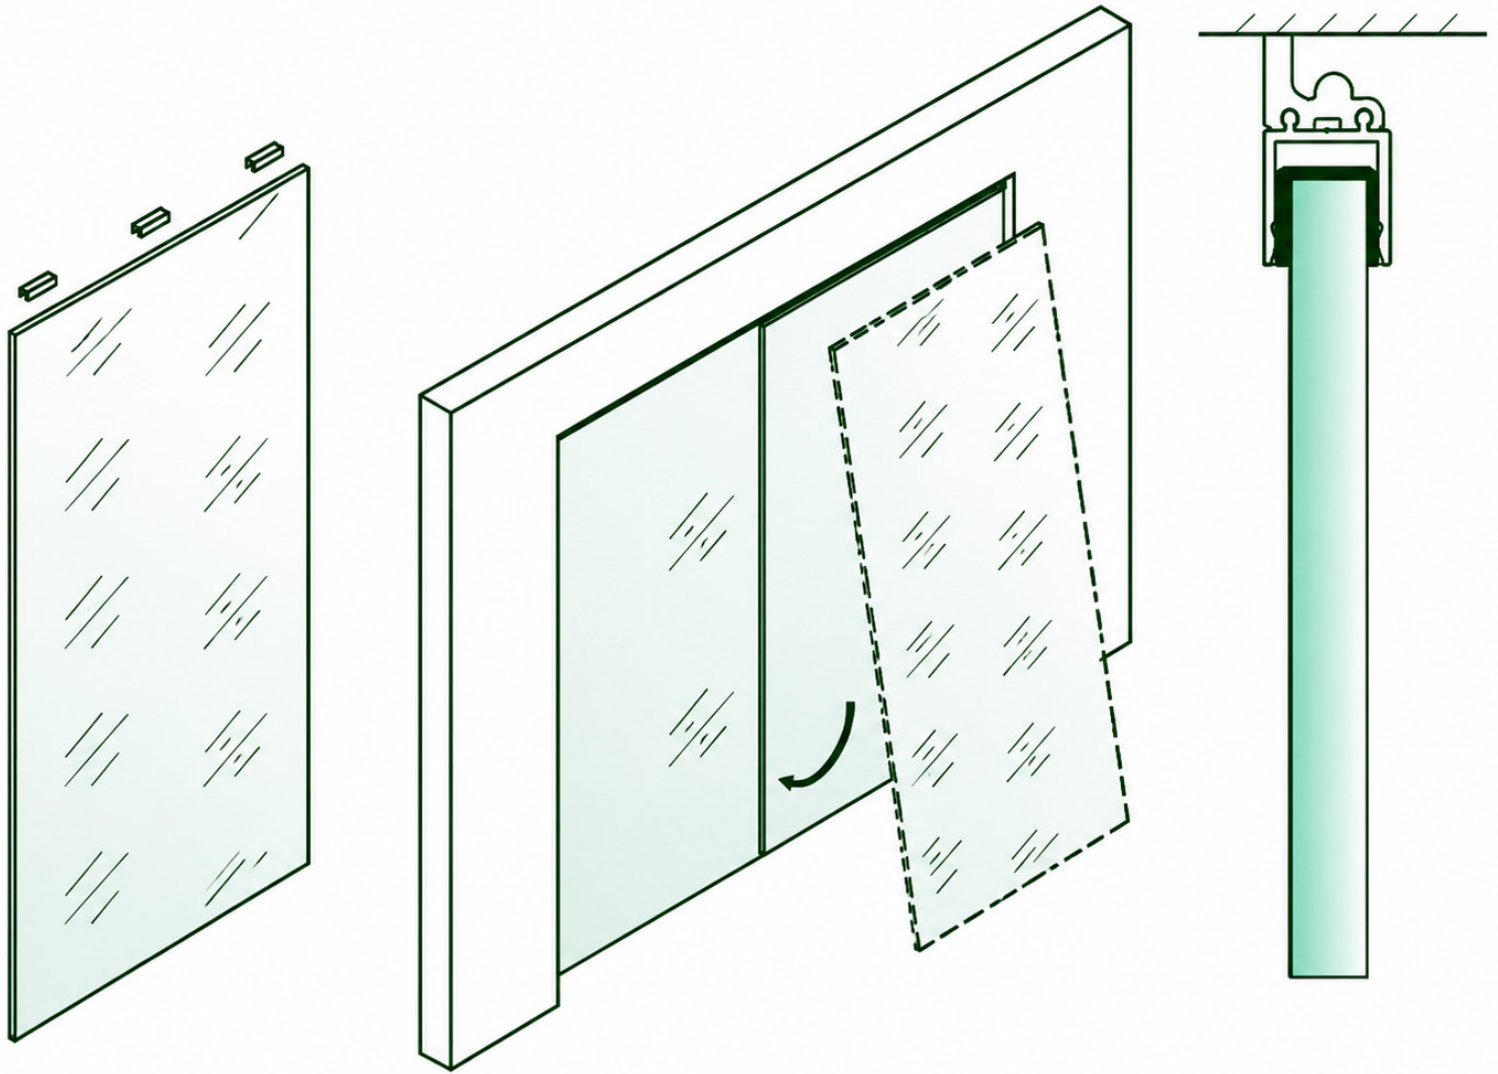4.2 Install the fixed panel glass into the U type aluminum profile, adjust the verticality and tighten it.



STEP 5

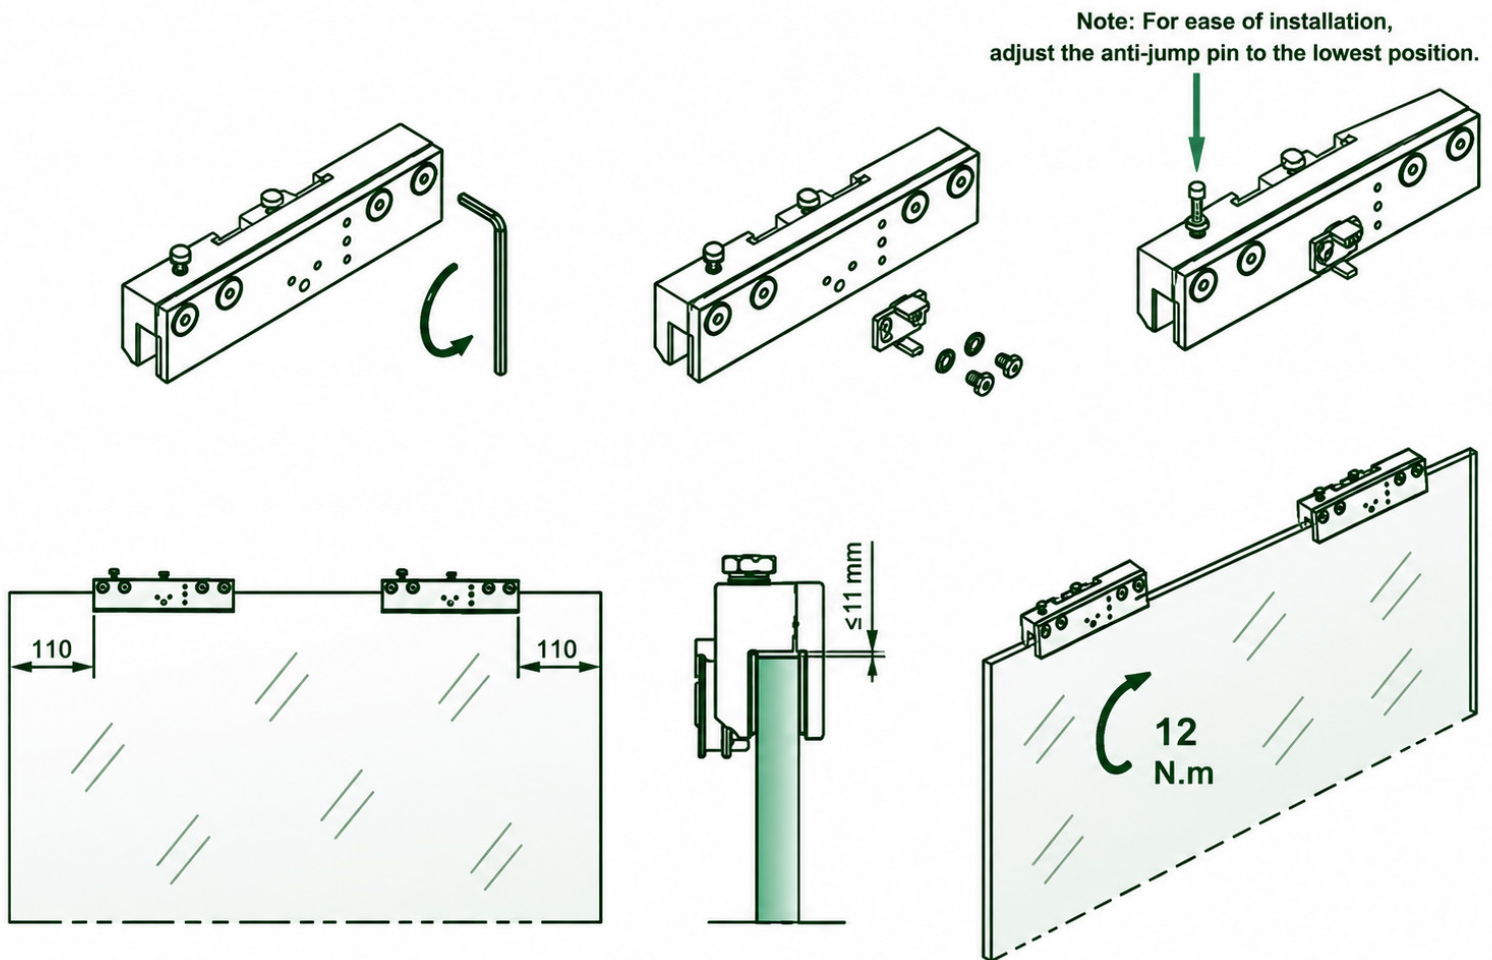
5. CLAMP INSTALLATION:

5.1 Loosen the set screws (make sure it can pass the thickness of the glass door)

5.2 Catcher plate installation.

5.3 After installing the clamp, leave 1mm gap between the top of the door and the clamp.


5.4 Tighten the screws with 12N. m torsion.



STEP 6

6. SLIDING DOOR INSTALLATION:

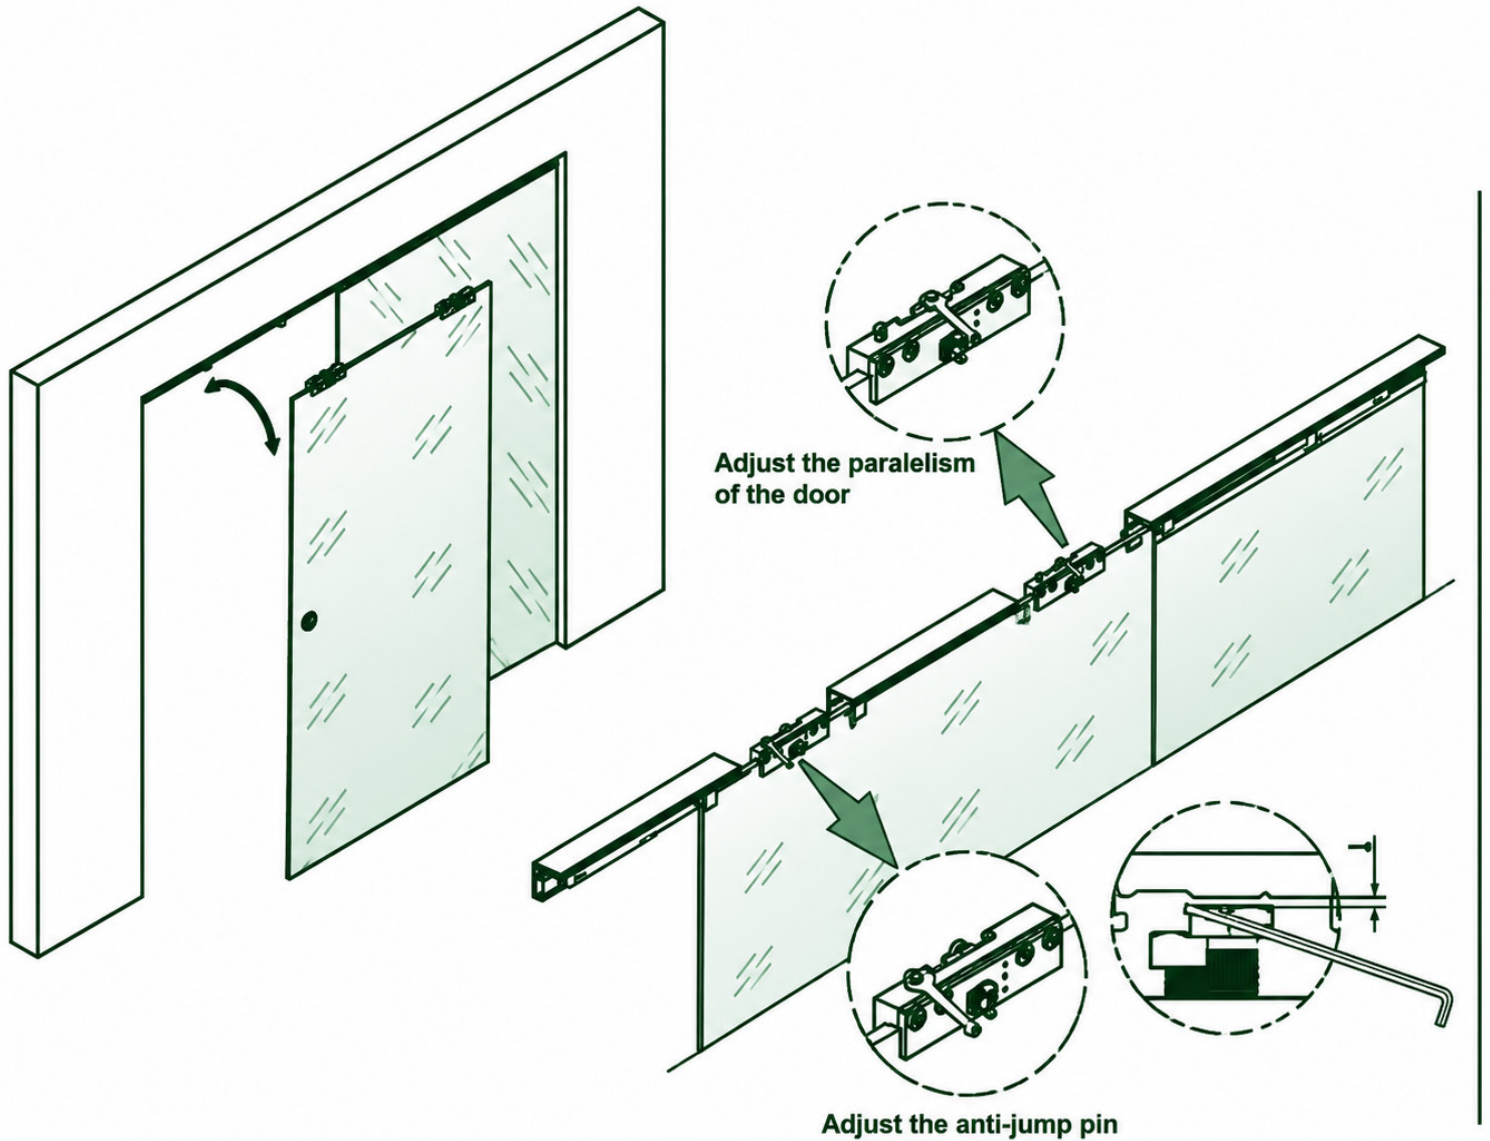- 6.1 Install the sliding door in the track.
- 6.2 Adjust the parallelism of the door (As shown in below).
- 6.3 Adjust the anti-jump pin (As shown in below).



STEP 7

7. Adjusting soft close damper:

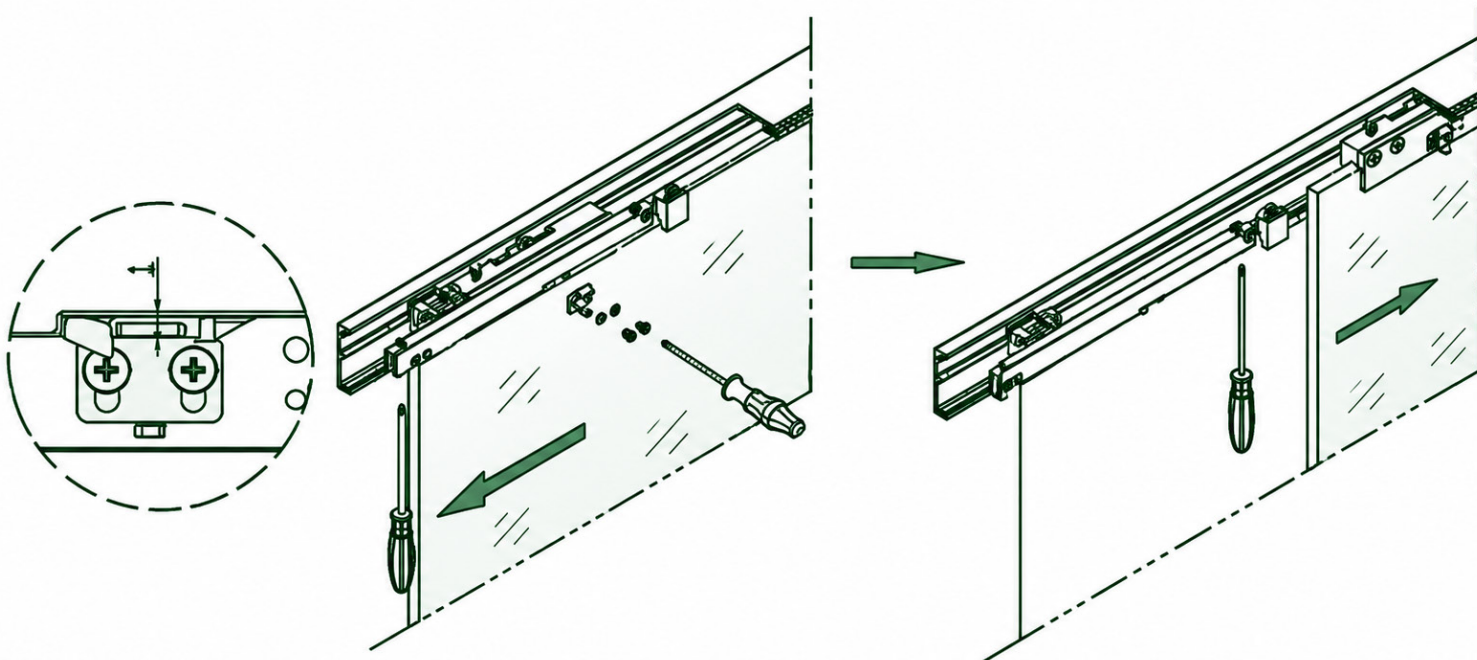
7.1 Adjust the height of the catcher according to the soft close damper.

7.2 Find out the exact position of two sides of soft close damper on the track according to the extreme position of OPEN/CLOSE the door.

7.3 Determine the soft close damper position and tighten it.



Warning: the door can not collide with the wall




STEP 8

8. DECORATIVE COVER INSTALLATION:

8.1 Tighten the buckle in the track.

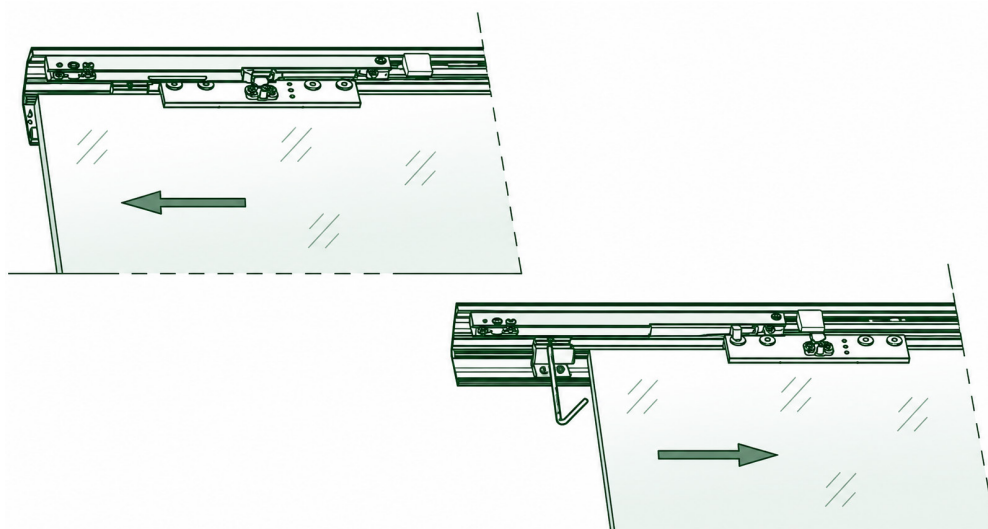8.2 Install decorative cover in the track as shown.




STEP 9

9. DECORATIVE COVER INSTALLATION

9.1 Uniformly distribute the buckles on the track and fix them.

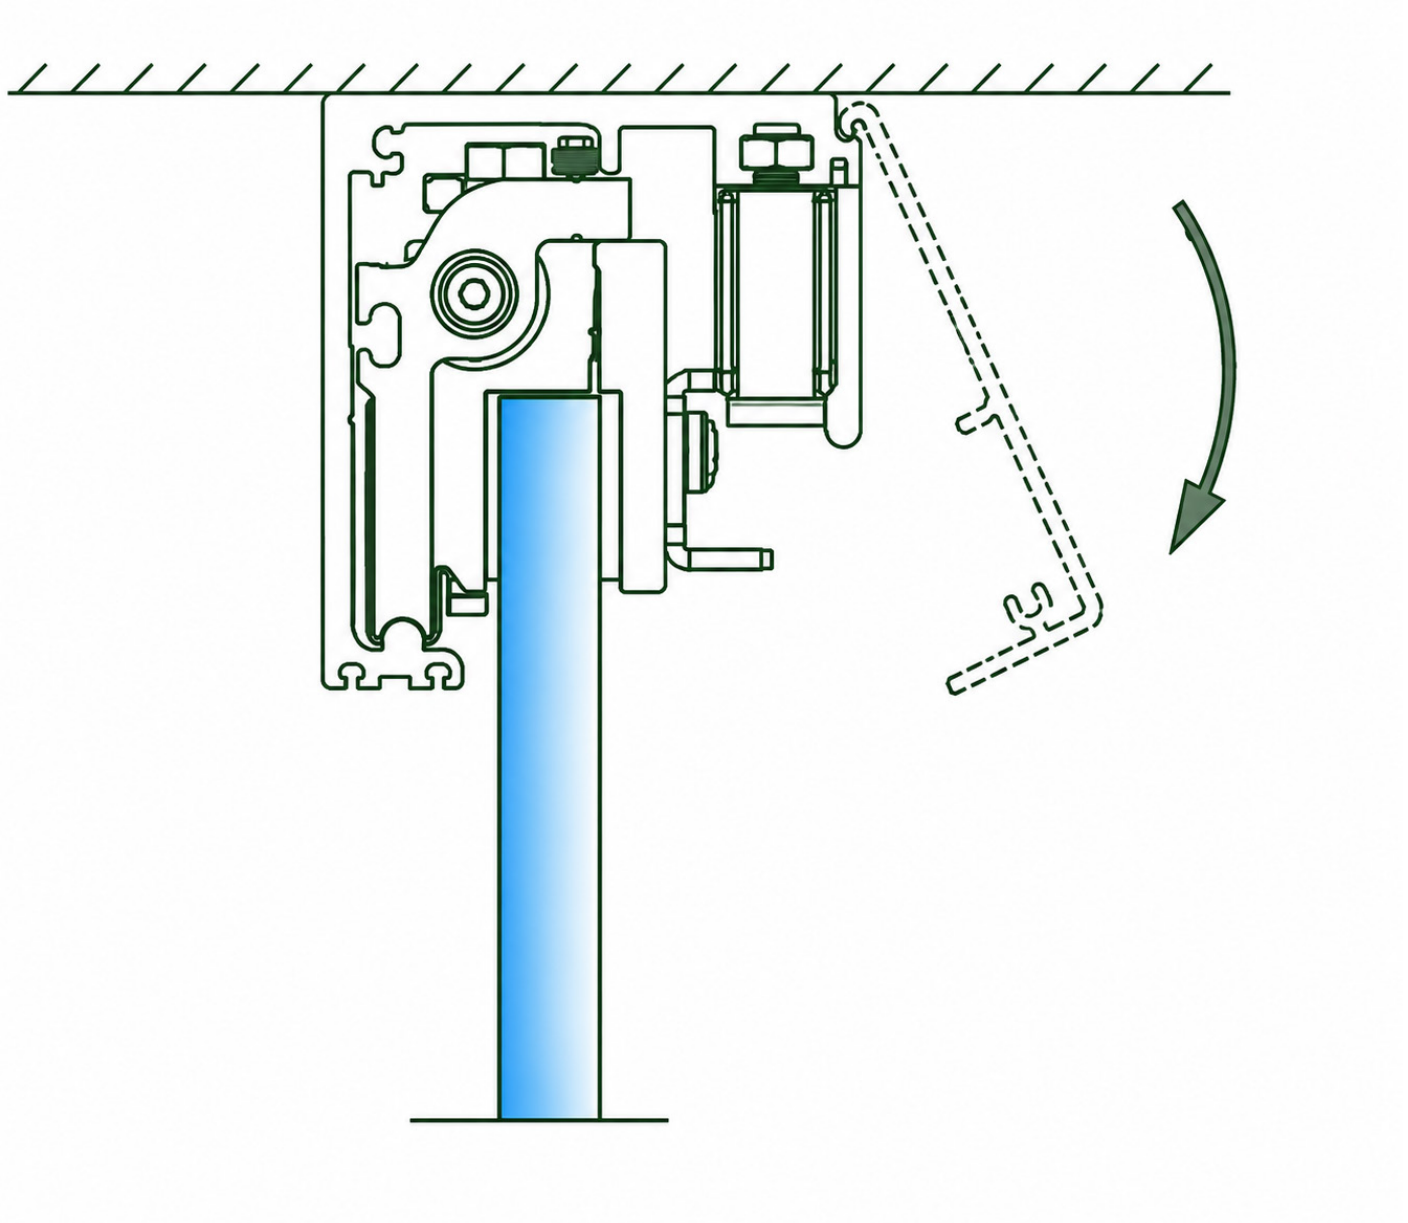9.2 Install the decorative cover to the track as shown in below.



INSTALLATION INSTRUCTIONS

COMMERCIAL ECONOMY WALL MOUNT INSTALLATION



GLAZE
HARDWARE

Phone: (813) 922-2309
glazehardware.com

Please keep this manual and the product code number for future reference and to order replacement parts if necessary

GENERAL INSTRUCTIONS

- Please read this manual carefully and thoroughly before proceeding.
- For your safety, it is recommended that you wear safety glasses at all times during installation.

INSTALLATION OVER CERAMIC TILES

- If you are installing the shower door over ceramic tiles, make sure that the tiles lay completely under the wall jamb.
- Use mildew resistant silicone to seal the gaps where the ceramic tiles meet the fixed panel.

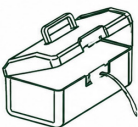




NOTICE

- Caulking is not required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR


- Do not use scouring powder pads or sharp instruments on metal pieces or glass panels.
- To keep the panels and metal parts looking new, occasionally wipe them down with a mild soap diluted in water.
- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED

				
TOOL BOX	SCREW DRIVER / PENCIL	TAPE MEASURE / TAPE / PLUMB BOB	ALLEN KEY SET	LEVEL
				
DRILL BITS $\phi 10$ / $\phi 8$ / $\phi 6$	MALLET	GLASS LIFTER	SETTING BLOCK	CORDLESS DRILL









Product specifications are subject to change without notice.

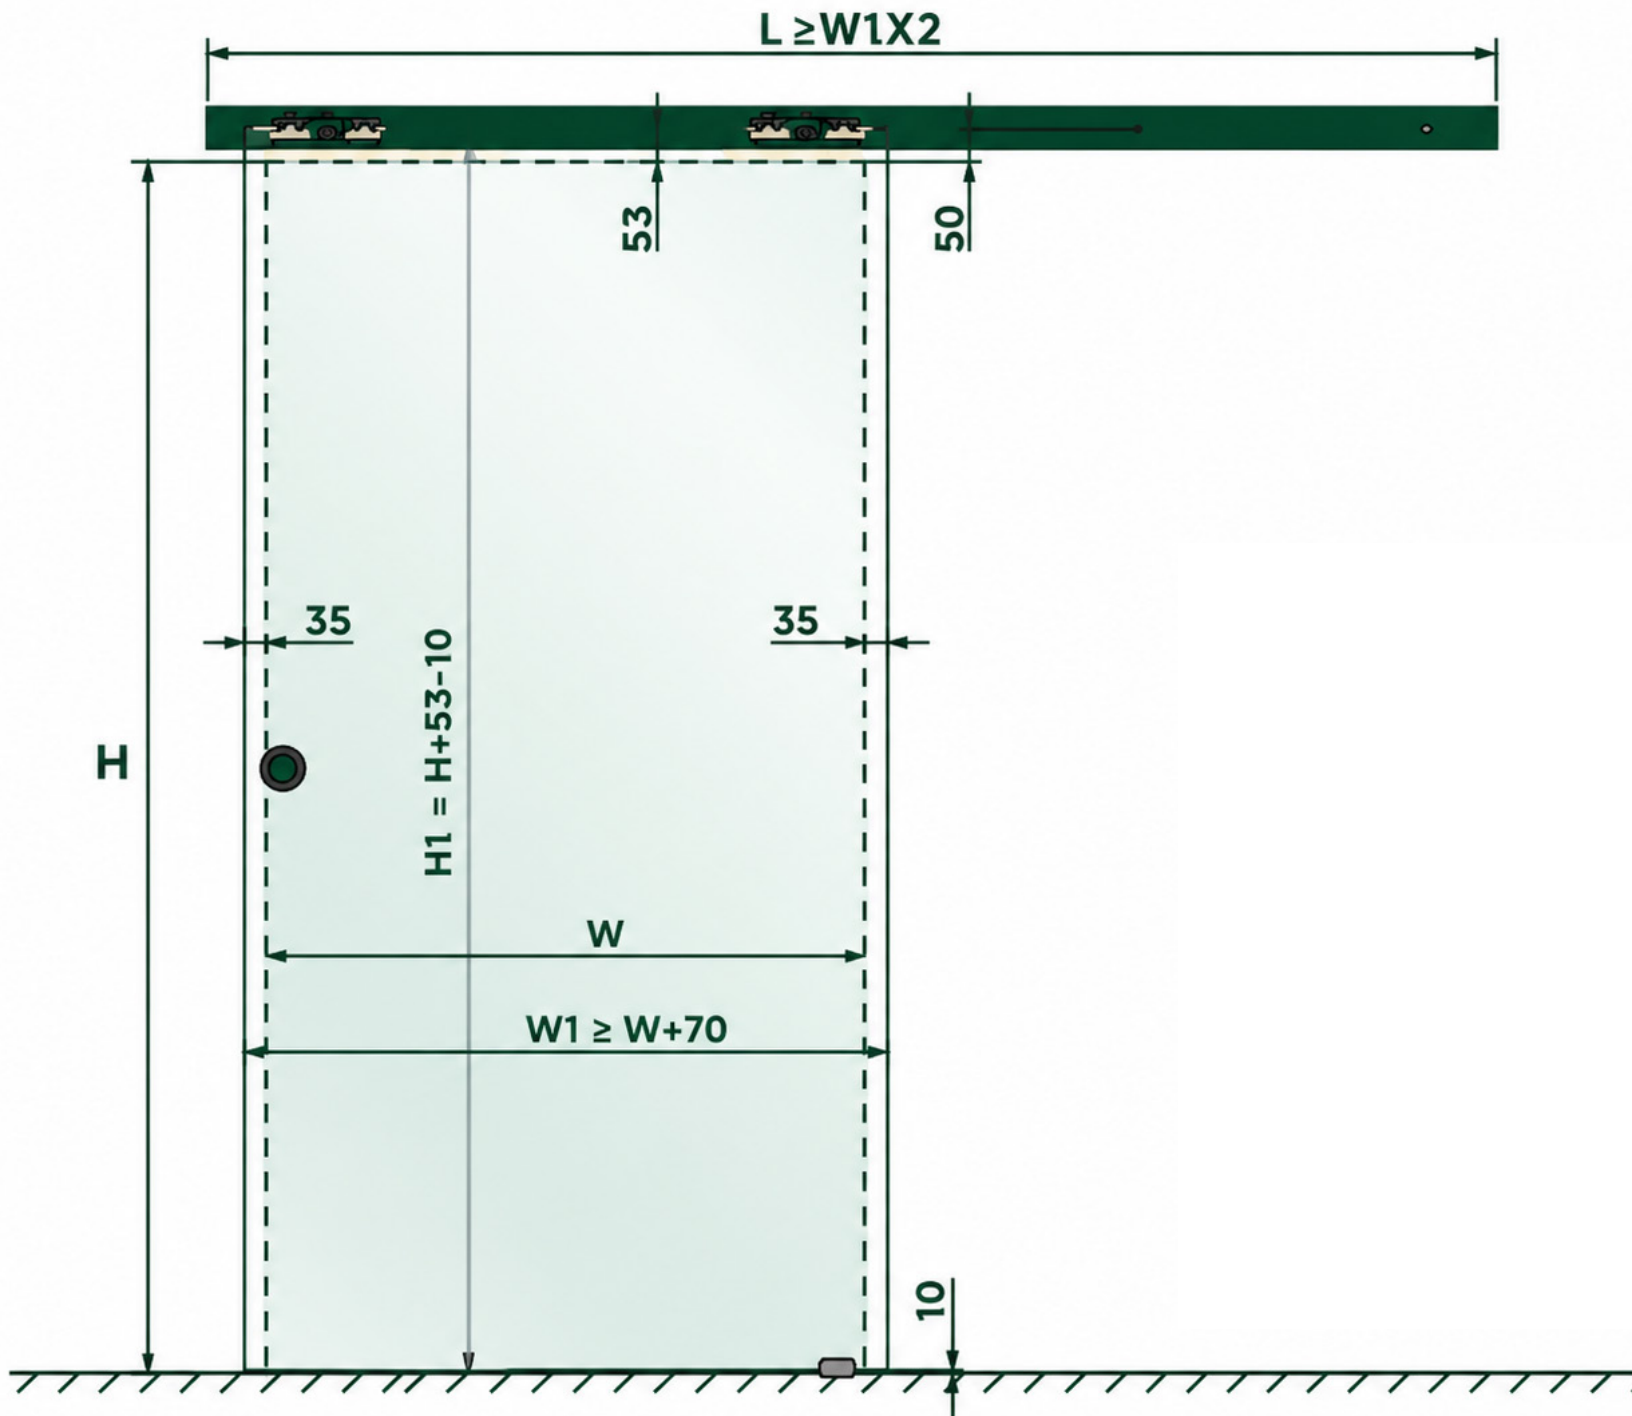WALL MOUNT INSTALLATION



*Our products are available in a variety of colors and sizes to suit your needs.

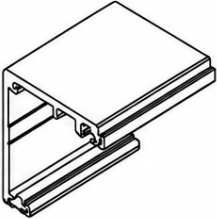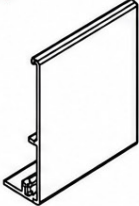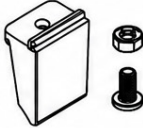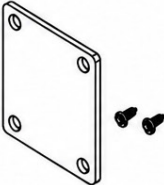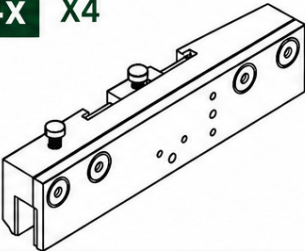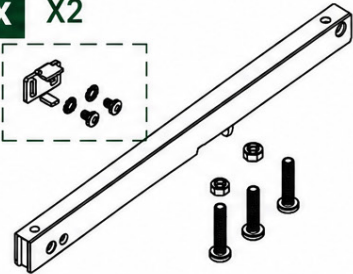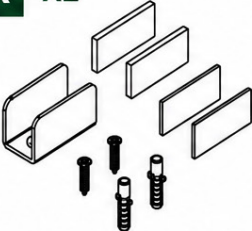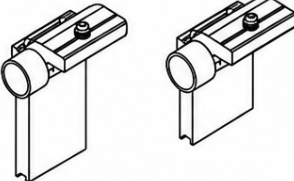PARTS LIST


1x X1 	1x X1 	2-3 pcs Per 1m 
2x X2 	1x X1 	4x X4 
2x X2 	2x X2 	2x X2 

STEP 1

1. TRACK INSTALLATION:

1.1 Drill dia 8 mm hole on wall according to the screw hole position of the track fill in the plastic plug

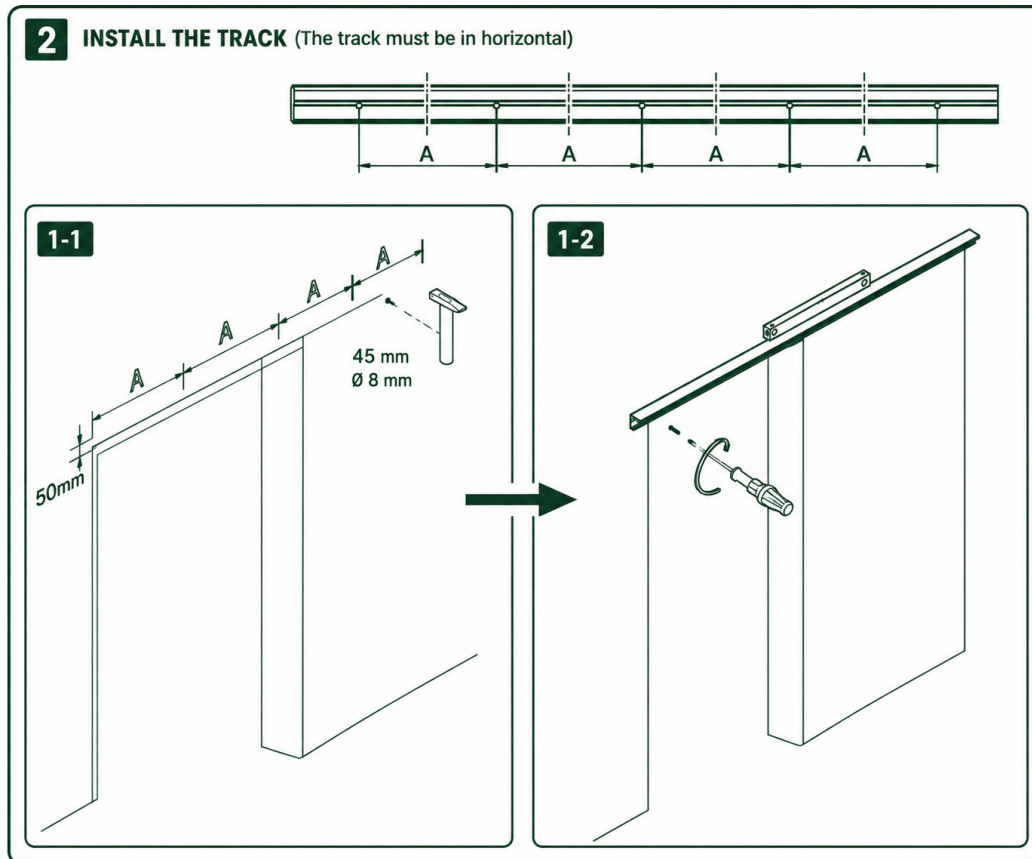1.2 Install the track (The track must be in horizontal)




STEP 2

2. DOOR GUIDE INSTALLATION:

2.1 Mark the installation position X 24mm away from the wall with a plumb bob.

2.2 Drill dia 6 in depth 20mm

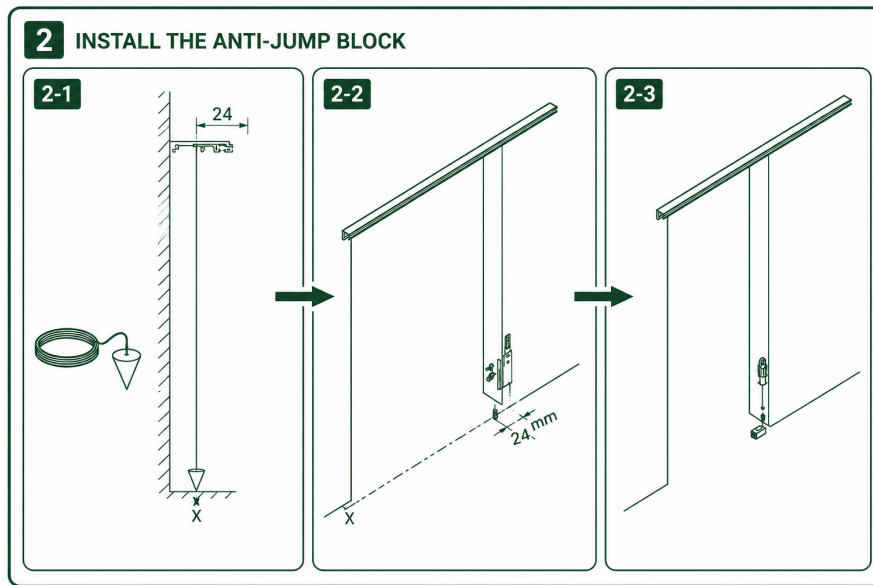2.3 Insert plastic plug and install door guide



STEP 3

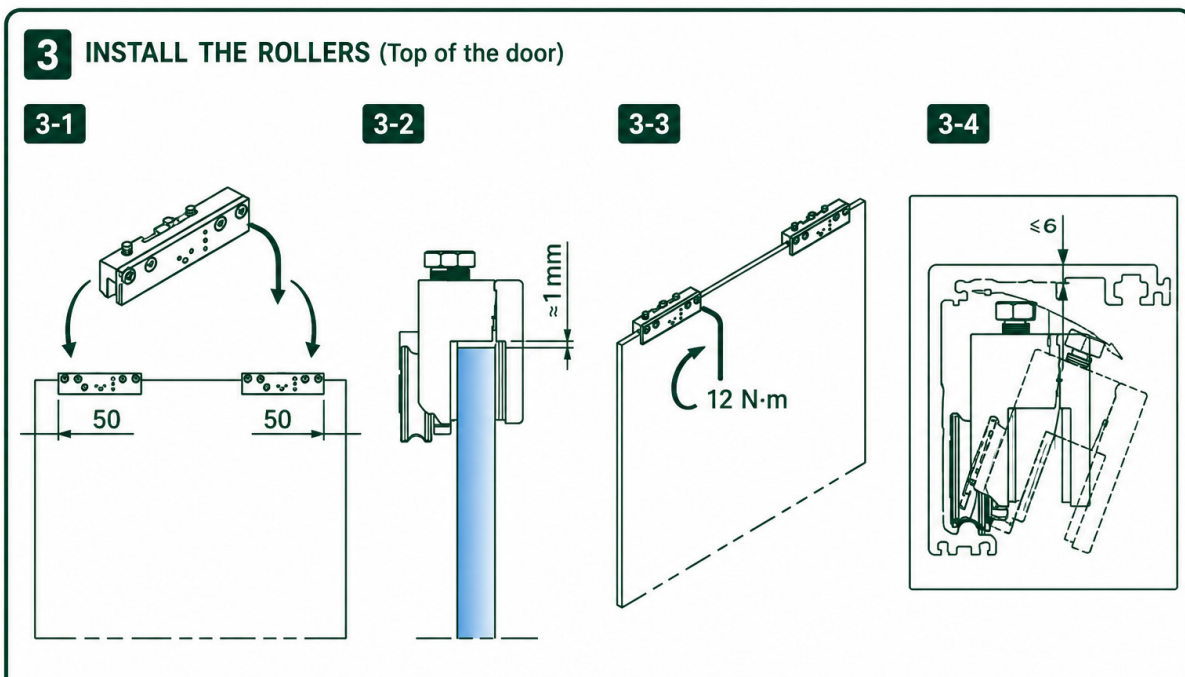
3. CLAMP INSTALLATION:

3.1 Loosen the set screws (it can through the thickness of the door).

3.2 It should leave 1mm gap between the top of and the clamp

3.3 Tighten the screws with 12N.m torsion

3.4 Make sure the anti-jump disk below 6mm for installation



STEP 4

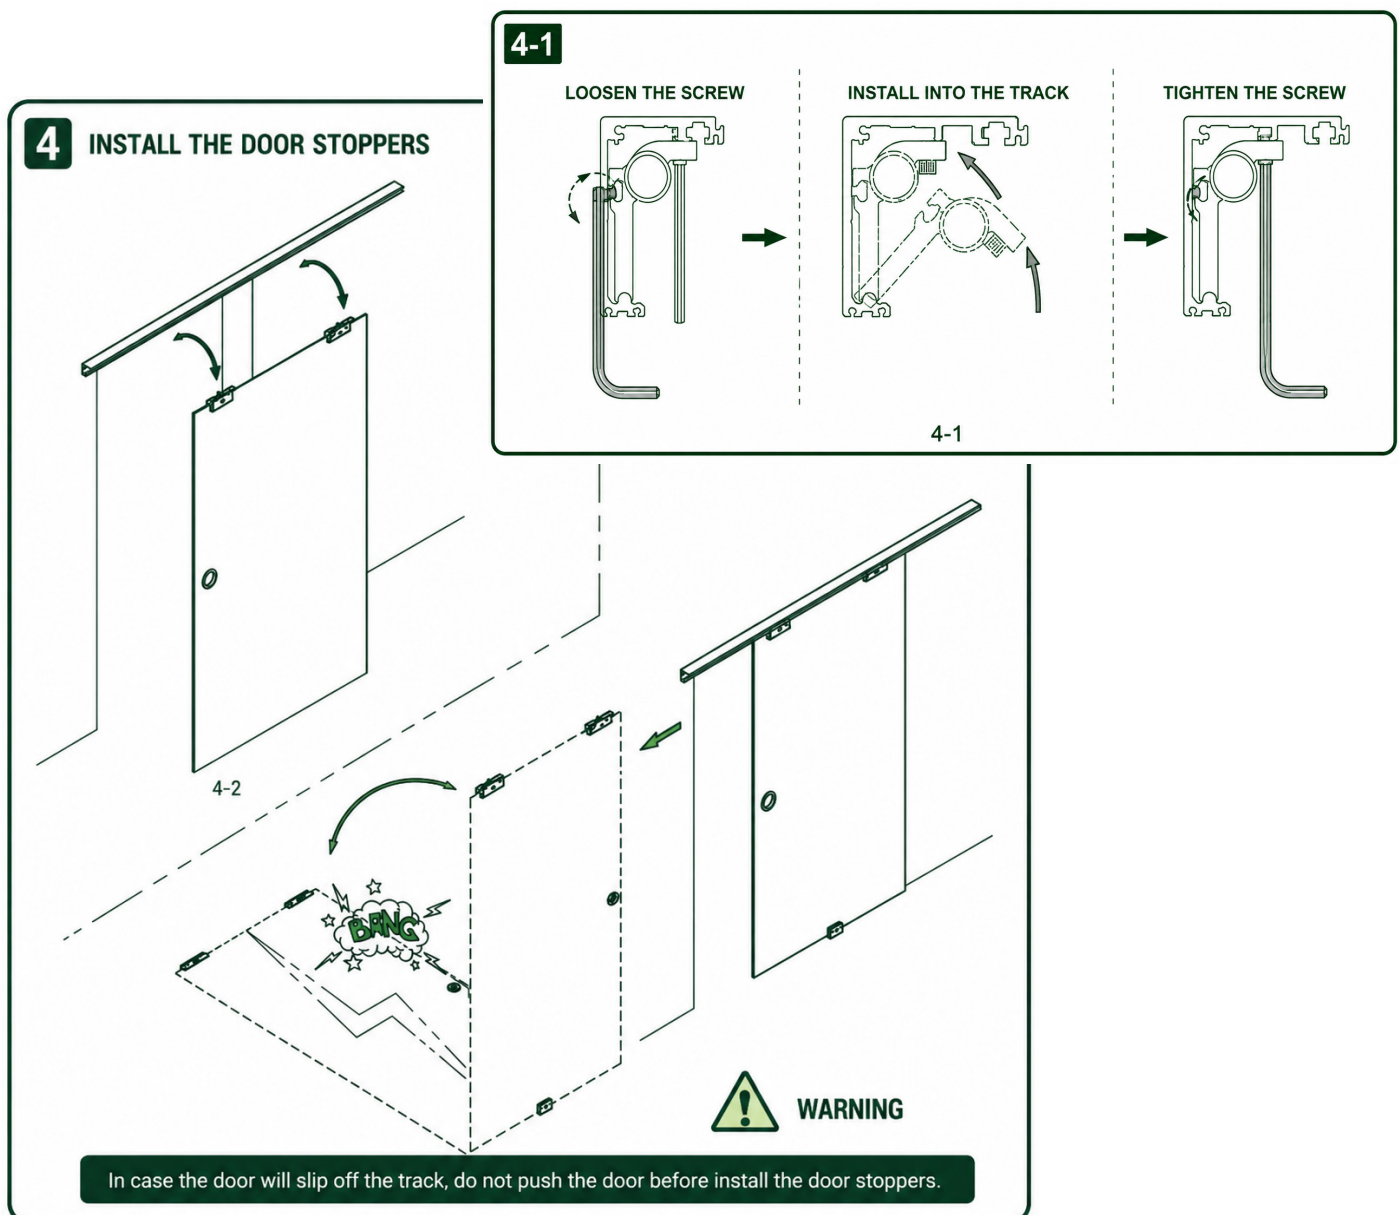
4. DOOR INSTALLATION:

4.1 Pre install the door stoppers and slightly tighten it.
It is prevent the door slip off the track

4.2 Install door in the track

4.3 Tighten the screws with 12N.m torsion

4.4 Make sure the anti-jump disk below 6mm for installation




STEP 5

5. ADJUSTIN THE DOOR:

5.1 Adjust door height and verticality by the adjusting screw.

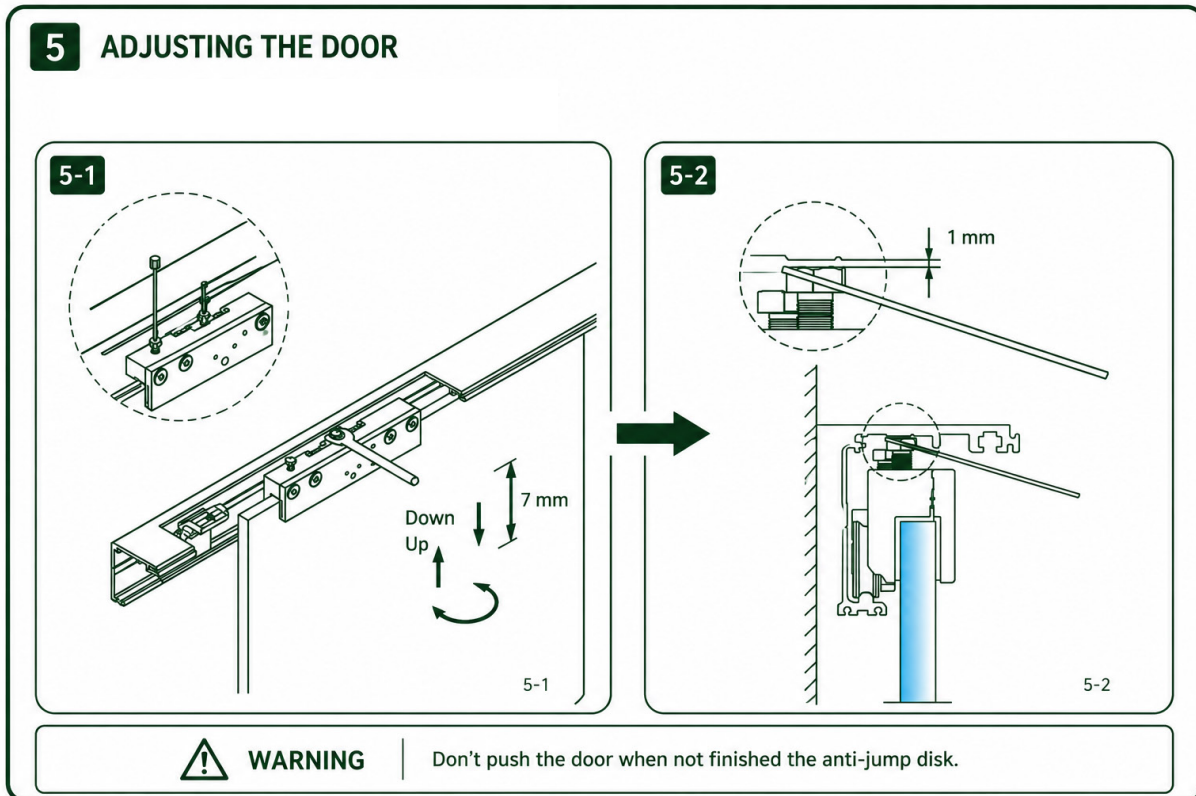5.2 Adjust the height of the anti-jump disk



STEP 6

6. SOFT-CLOSER AND ACCESSORIES INSTALLATION:

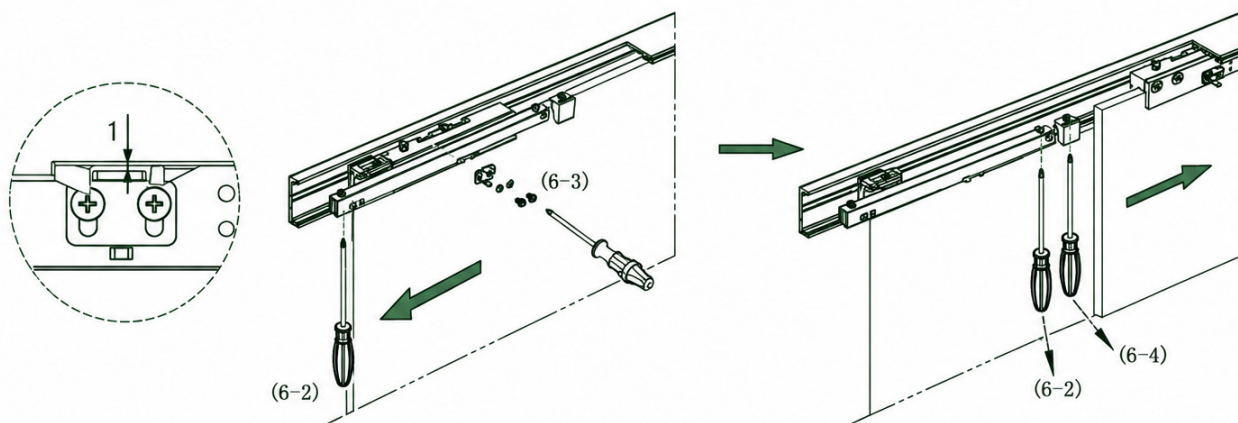
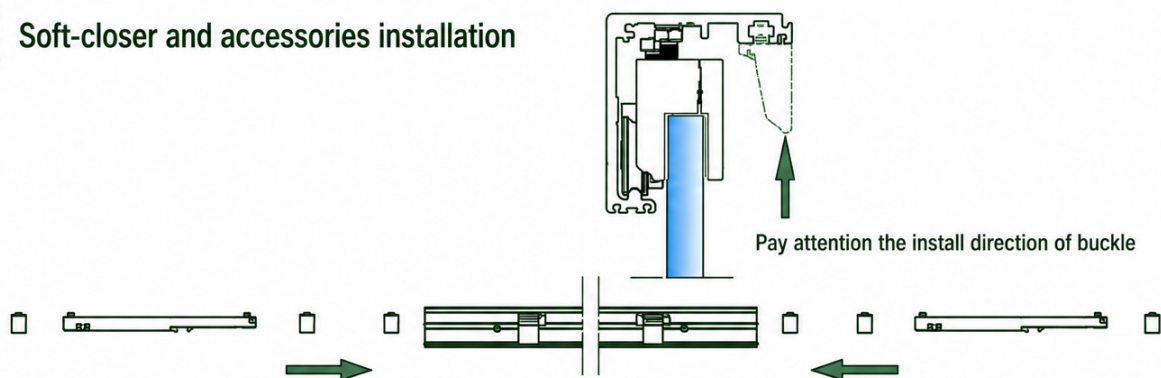
6.1 Silde the accessories into the track in order as the below picture shown.

6.2 Make sure the soft-close position and tighten, base on extreme position in opening or closing door (Right side and left side is the same)

6.3 Catcher installation

6.4 Tighten buckle as the shown in 6-4

6 Soft-closer and accessories installation




STEP 7

7. DOOR STOPPER INSTALLATION:

7.1 Open/close the door to the extreme position under the effect of the soft close. Move the door stoppers to the suitable position and fix them.

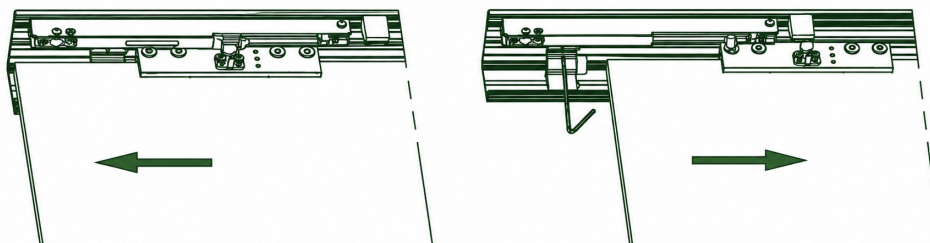7.2 Right side and left side is the same.




STEP 8

8. DECORATIVE COVER INSTALLATION:


8.1 Tighten the buckle in the track.

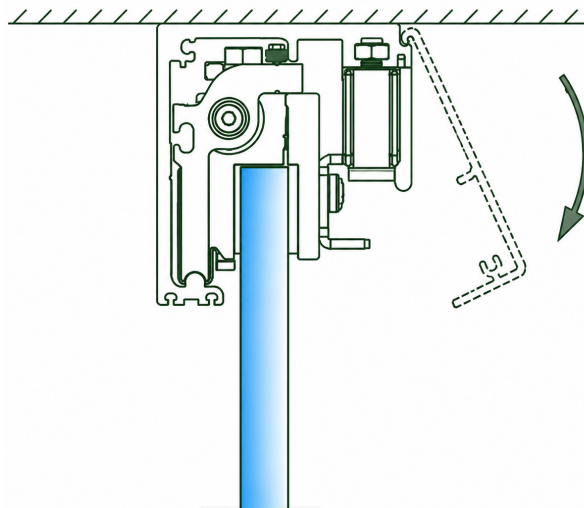8.2 Install decorative cover in the track as shown.



STEP 9

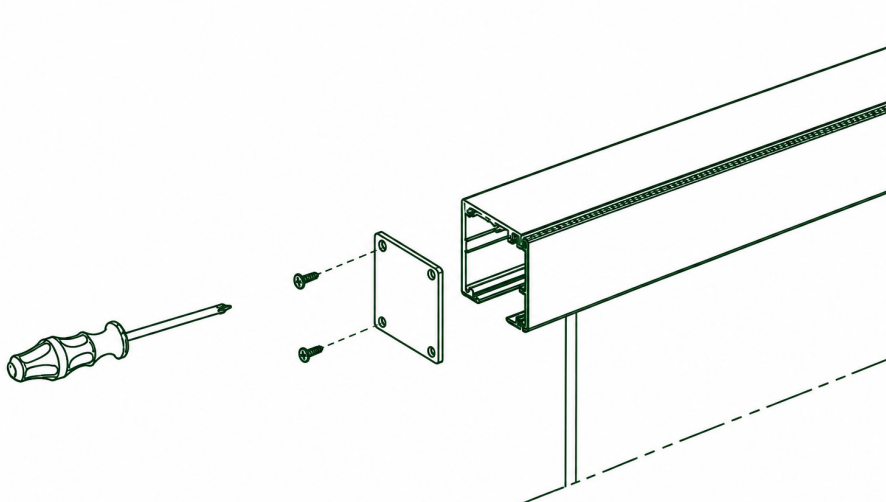9. SIDE COVER INSTALLATION



Right side and left side is the same